

## Maintenance Schedule: COBRA

Item	Frequency	Daily	3,000	4,000	8,000	12,000	16,000	20,000	24,000
Brake Pads and Rotors	[1]			I	I	I	I	I	I
Half Shaft Boots				I	I	I	I	I	I
Gear Box Oil	[2]		R					R	
Wheel Bearings	[3]			I	I	I	I	I	I
Rear End Oil	[4]		R					R	
Wheels and Tires				I	I	I	I	I	I
All Lighting		I							
Tire Pressure		I							
Brake fluid				I	I	R	I	I	R

**I: Inspect and clean, adjust, lubricate, and/or replace if necessary.**

**R: Replace**

**L: Lubricate**

**REAR TIRE PRESSURE 28 PSI**

**This Schedule is in addition to the Honda Maintenance Schedule**

**NOTE:**

**[1] Minimum pad thickness is .04 inches (1.02mm)**

**[2] Gear Case oil should be changed after the first 3 months or 3,000mi., whichever comes first. Gear Case oil should then be changed every 12 months or 20,000mi. Use only **NON-synthetic 80W-90 GL-5** gear oil. The Gear Case should contain 6 oz.**

**[3] Wheel bearing torque 200 FT. - LBS.**

**[4] Rear end oil should be changed after the first 3 months or 3,000mi., whichever comes first. Rear end oil should then be changed every 12 months or 20,000mi. Use only **NON-synthetic 80W-90 GL-5** gear oil. The differential case should contain **no more than 1 qt** of gear oil.**

**At higher odometer readings, repeat at frequency intervals established here.**

**Service & Maintenance questions – contact Parts & Service at 434.263.8866**