

Maintenance Schedule:

Item	Frequency	Daily	4,000	6,000	8,000	12,000	16,000	20,000	24,000
Rzeppa Cross Groove Grease								R	
A-arm grease Zerk fittings								L	
Brake Pads and Rotors [1]			I		I	I	I	I	I
Half Shaft Boots			I		I	I	I	I	I
Delrin Disk								R	
Wheel Bearings [2]			I		I	I	I	I	I
Rear End Oil [3]				R				R	
Wheels and Tires			I		I	I	I	I	I
All Lighting		I							
Tire Pressure		I							
Brake fluid			I		I	R	I	I	R
Rzeppa Cross Groove Boot [4]			I		I	I	I	I	I

I: Inspect and clean, adjust, lubricate, and/or replace if necessary.

R: Replace

L: Lubricate

NOTE:

[1] Minimum pad thickness is .04 inches (1.02mm)

[2] Torque on wheel bearings 200 ft-lbs.

[3] Rear end oil should be replaced after the first six months or 6,000mi., whichever comes first. Rear end oil should be replaced every 20,000mi., or 12 months. Use only **NON-synthetic 80W-90** gear oil. The differential case should contain **no more than 1 qt** of gear oil.

[4] Re-torque the six 5/16-18 x 1 3/4 socket head cap screws after the first 100 miles.

At higher odometer readings, repeat at frequency intervals established here.

Service & Maintenance questions – contact Parts & Service at 434.263.8866