

*Arrow*

By **CSC**  
*TRIKES*

**ELECTRIC REVERSE**

**INDIAN MOTORCYCLES**

**CLASSIC - VINTAGE - DARKHORSE  
CHIEFTAN & ROADMASTER MODELS  
2014 - CURRENT**

Revised 10 - 2018

**Installation Instructions**

**California Sidecar Parts & Technical Support  
434.263.8866**

## **Warnings and considerations:**

- 1. Disclaimer** - These instructions assume a level of understanding of motorcycle repair and maintenance beyond that of a “beginner” and/or “novice” and California Sidecar cannot be liable for an installer’s failure to understand or follow these instructions as written. Likewise, California Sidecar cannot be responsible if any of the steps are omitted or shortcuts are taken, or parts other than those supplied by California Sidecar, are used in installing this trike kit.
- 2. “WARNINGS”** are all printed in bold type and capitalized. They mean to use extreme care in a given step so as not to damage the part, motorcycle, and/or yourself.
- 3. Always wear safety glasses** when using hand and/or power tools.
- 4. When working in and around the fuel system, always work in a well-ventilated area, free from sparks and open flames.**
- 5. All directional references to the “right side” and the “left side” are as if you are seated on the motorcycle.**
- 6. All directional references to “forward” mean to the front of the motorcycle while “back” means the rear of the motorcycle unless otherwise stated.**
- 7. Please consult the appropriate Service Manual for your motorcycle if further detail is necessary.**

**INSTALL REVERSE UNIT AND ALL ITS PARTS BEFORE THE TRIKE BODY IS INSTALLED.**

## Assembly:

1. **Install all trike chassis and brake parts**, tension 28 MM and 50 MM belts and tighten all belt clamping bolts.
2. Adjust angle of reverse assembly to the farthest rearward position that maintains clearance to the brake line by loosening the 5 bolts shown in fig 1. **(Blue arrow)**. Retighten bolts when position is correct.

## Set Tension of the Reverse belt:

1. Sonic Tension Meter specs:  
MASS 004.7  
WIDTH 021.0  
SPAN 0176  
Reverse Belt Tension:  
SINGLE SPAN TENSION: 49-55 lbs.
2. To tension belt you must loosen the 3 fasteners (**Red 1 - 3 see fig 1**).
3. Using a 3/8 drive breaker bar insert it in the square drive hole (**fig 1. red arrow**) and pull belt tight, then retighten the 3 fasteners
4. Follow this procedure until the proper tension is achieved


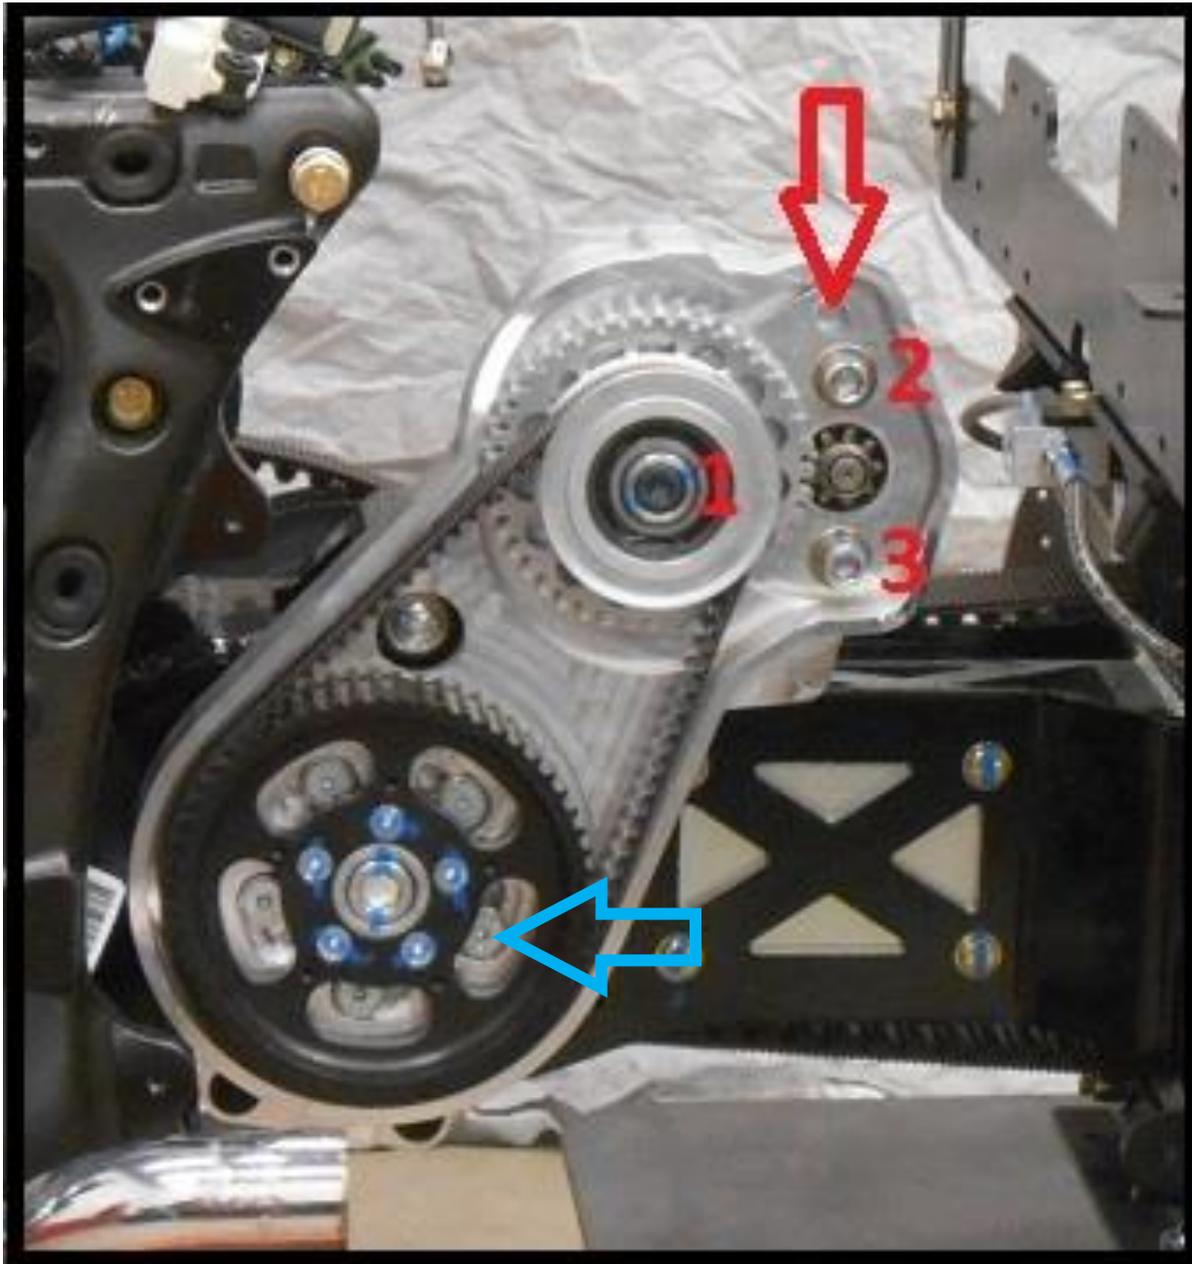


fig1

Image shown without frame mounts for clarity.

## Wiring:

1. Secure Reverse module to Rear Mount Plate with cable ties.

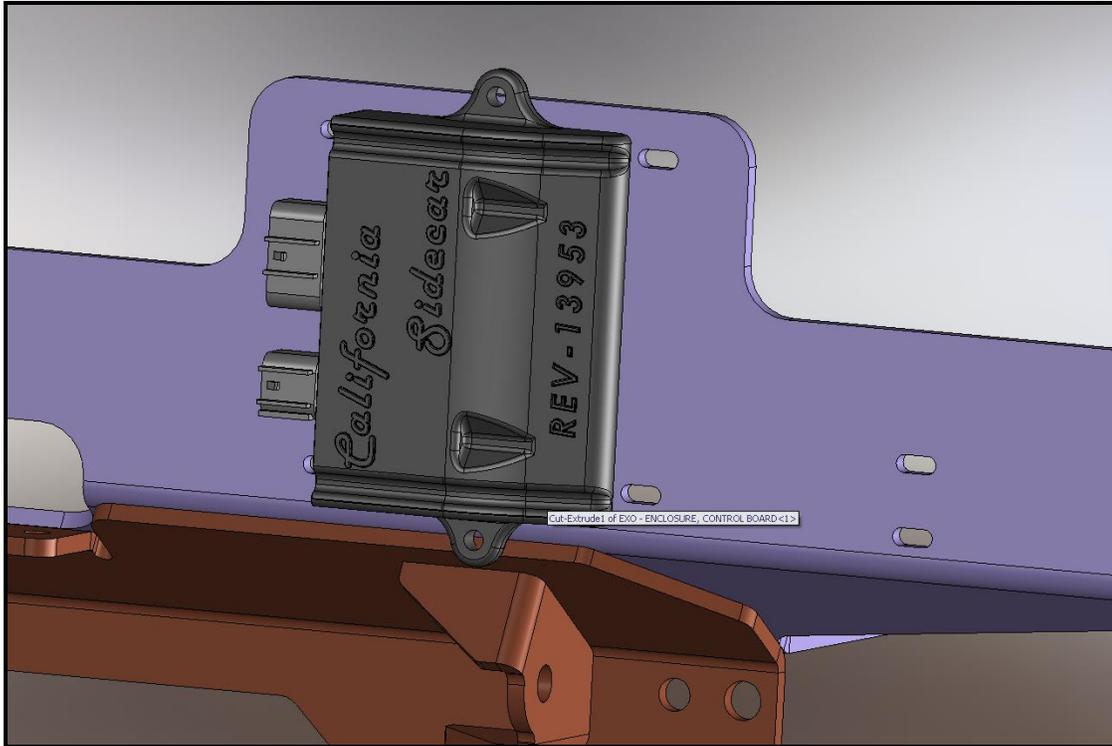

2. Secure the Neutral Switch Module to the opposite side of Reverse Module on mount plate.
3. Disconnect the Negative battery terminal.
4. Plug reverse harness connectors into the Reverse module.
5. Plug Neutral Module into reverse harness.
6. Route the **Blue** and **White** wires to the Reverse motor.
7. Route the long wire harness up under the seat.
8. Route the **Red** and **Red/Yellow** wires to the fender plug.
9. Connect the **Red/Yellow** wire to the **Pink/Blue** wire (Brake Light).
10. Temporarily connect the **Red** wire to the battery positive.
11. Once the body is installed connect the **Red** wire to the **Green** wire at the trike body GRD EFX 4 pin plug.

12. Remove 2 fasteners from the OEM Fuse Box.
13. Locate the Purple/Yellow wire (Fuel pump).
14. Connect the Green wire to the Purple/Yellow wire. Reinstall Fuse Box.
15. At the VCM center connector, cut the horn wire at pin #4 leaving approximately 2 in of pigtail out of the connector.

#### **2014 – 2016 Horn wire – Clear or Shielded**

#### **2017 – UP Horn wire - White**

16. Connect the Black wire to the portion of the Horn wire that goes to the horn.
17. Connect the Yellow wire to the portion of the Horn wire coming from the VCM connector.
18. At the VCM left hand Black connector, locate the Yellow/Black wire (neutral switch) at pin #17.
19. Splice the Yellow/Black wire from the CSC harness into the Yellow/Black VCM wire.
20. Route the remaining end of the harness with the 3 pin connector up under the gas tank to the front end.
21. For fairing models install the button just above the Fog Light button.
22. For non-fairing models install the button just below the Fog Light button.

#### **2017 – UP:**

Install the button on the Handle bars with supplied bracket.

23. Once a position is located drill a 15/32 hole.
24. Insert the wire thru the cover and install nut and tighten.
25. Connect the harness to the Reverse switch and secure wires with cable ties so that the wire has clearance when handlebars are turned.
26. Install terminal boot onto Red positive cable.
27. Connect the Red positive cable to the stud on the Reverse motor solenoid.

28. Install the Black ground cable and white wire to the gearbox mounting bolt on the Reverse motor assembly. Route the other end of the negative cable to the Motorcycle Negative cable on the frame.
29. Connect the blue wire to the male spade on the Reverse motor.
30. Connect the other end of the Red positive cable to the motorcycle positive terminal stud on the rear of the battery box.
31. Ensure that all wires and miscellaneous components are secured to the frame with cable ties.
32. Reconnect battery negative cable.

### **Operating the Electric Reverse:**

1. With the Trike in neutral, start the engine. Reverse will not engage if Trike is not in neutral.
2. Depress the reverse button to engage reverse and the LED will light up.
3. Press the Horn button and the trike will then back up.
4. If the brakes are applied the reverse will pause until the brakes are no longer being used.
5. To disengage reverse either press the button and the LED will turn off, or put Trike in gear.

**From all of us at California Sidecar.  
Enjoy the ride!**